

MED⁹EL



RONDO[®]


Single-Unit Audio Processor

Quick Guide

Table of Contents

- Basic Assembly 2
- Indicator Lights. 4
- FineTuner 6
- FineTuner Light Patterns. 8
- Batteries. 9
- Telecoil Accessories. 10
- Mini Battery Pack 12
- Assistive Listening Devices 14
- Accessories. 16
- Basic Care and Maintenance 18
- Troubleshooting 20


RONDO® Single-Unit Audio Processor

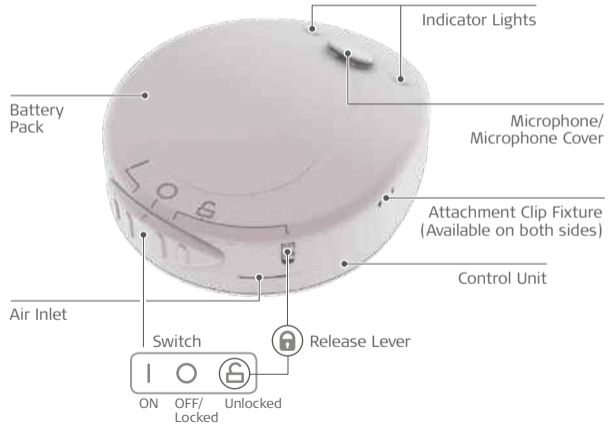

Basic Assembly



- 1** Install and lock the magnet into the control unit.

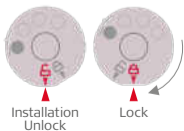


- 2** Insert the batteries with positive (+) poles facing out.



MED-EL strongly recommends that you don't change the magnet yourself. Contact your clinician to have the magnet changed or if you experience any skin irritation.

- 3** Ensure the switch is set to the **unlock** position. Hold down the **release lever** while setting the switch to **unlock** position.

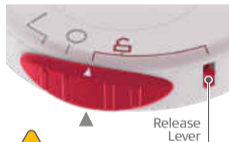

The switch must always be in the unlocked position (Ⓔ) prior to attaching to the control unit.

- 4** Slide the battery pack into the control unit **1**, push down **2**, and slide the switch to **locked position** (⓪).



Note the mechanism that secures the control unit to the battery pack.

Opening the Battery Pack



- 1** Hold down the release lever.
- 2** Slide the switch to **unlock position** (Ⓔ) and lift the battery pack up.

Removing Batteries



The bottom side of the control unit can be used to easily lift batteries out of the battery pack.

Indicator Lights



Confirmation



Status

FineTuner command has been successfully received.

Program Change



Program 1 is selected.



Program 2 is selected.



Program 3 is selected.



Program 4 is selected.

Status



If the optional status light has been activated:
RONDO is initialised and working.



Scale in Seconds

Warning



Status

Batteries are empty.

Solution

Change the batteries.



Either minimum or maximum volume
has been reached, or audio sensitivity
has been reached.

Adjust volume or sensitivity
if necessary.

Error Pattern



Problem

Temporary error or electronic
malfunction.

Solution

1. Turn processor off.
2. Turn processor back on.



The setting you selected has not yet
been programmed, or there has been a
program malfunction.

Select another setting.



Temporary error or electronic
malfunction.

1. Turn processor off.
2. Turn processor back on.




Programming failure, temporary error,
or electronic malfunction.

1. Turn processor off.
2. Turn processor back on.



Scale in Seconds

FineTuner

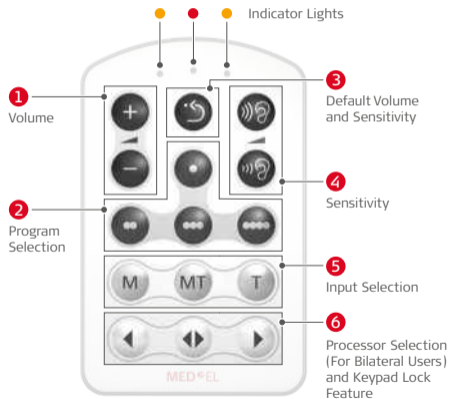

- 1 **Volume**
Increase or decrease the volume
- 2 **Program Selection**
Choose a program
- 3 **Default Volume and Sensitivity**
Set volume and audio sensitivity to default setting as determined by your audiologist
- 4 **Sensitivity**
Increase or decrease the audio sensitivity
- 5 **Input Selection**
M: Selects the microphone
MT: Selects microphone and telecoil
T: Selects the telecoil
- 6 **Processor Selection (For Bilateral Users)**
Select the left processor, both processors, or the right processor;
Activates and deactivates the Keypad Lock


FineTuner Keypad Lock

To prevent accidental setting changes, you can activate the FineTuner Keypad Lock. If any key is pressed while the keypad is locked, the red LED light on the FineTuner will blink.

Temporarily Unlocking the Keypad

You can make a selection even when the keypad is locked by pressing any given key twice. The first click temporarily unlocks the keypad, and the second click sends the command.

When the Keypad Lock is temporarily deactivated, the keypad will relock after 10 seconds of inactivity.

 Any FineTuner key can be deactivated by your clinician to prevent accidental setting changes.







Activating the Keypad Lock

1. Press and hold the (⏮) key for 5 seconds, or until the red and amber lights blink alternately.
2. Press the (⏭) key. When the keypad has been locked successfully, the amber lights will blink.

Deactivating the Keypad Lock

1. Press the (⏮) key twice. The second time, press and hold for at least 5 seconds, or until the red and amber lights blink alternately.
2. Press the (⏭) key. The amber lights will blink to indicate that your FineTuner is unlocked.

Light Patterns

Light Pattern	Meaning	Explanation
	Keypad is locked	If you press any key while the FineTuner is locked, the red indicator lights will turn on.
	Information is being transmitted	The indicator lights blink when signals are being transmitted. The left light blinks if the left side is activated. The right light blinks if the right side is activated. Both blink if both sides (for bilateral users) are activated.
	Input side change	Press the left key to send commands to the left side. Press the right key to send commands to the right side. The corresponding amber light will turn on. To send commands to both sides (for bilateral users), press the centre key. Both amber lights will turn on.
	Programming mode	Press for more than 5 seconds to activate programming mode. The 3 indicator lights will flash alternately.
	Batteries are low	If batteries are low, the red indicator light in the centre will repeatedly blink three times.
	Configuration has been successful	If configuration of your FineTuner has been successful or if the automatic keyboard lock feature has been either activated or deactivated, both amber lights will turn on for one second.


Batteries

Use only type 675 batteries to power your RONDO. We recommend using zinc-air batteries that are designed especially for hearing implant systems. When you use RONDO with the WaterWear accessory, however, you must substitute zinc-air batteries with one of the other types.

	675 Zinc-Air Batteries	675 Silver-Oxide Batteries	675 Alkaline Batteries	675 Rechargeable Batteries
Maximum battery life	75 hours	10 hours	8 hours	8 hours
Requires oxygen supply	Yes	No	No	No
Compatible with WaterWear	No	Yes	Yes	Yes

Telecoil Accessories

For Neckloops and Silhouettes

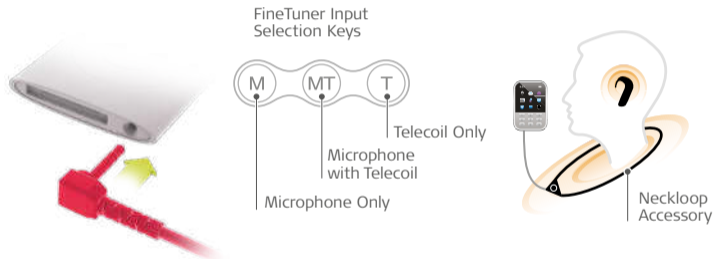


- 1 Insert the 3.5 mm plug of the telecoil accessory into the headphone jack of the audio device.
- 2 Press the **MT** or **T** button on your **FineTuner** to activate the telecoil and select the input type.
- 3 Place the telecoil accessory around your neck if you're using a neckloop or on your ear if you're using a silhouette.

For Induction Loop Systems




Look for the symbol that identifies the use of an induction loop system at venues.

- 1 Find the listening area of the induction loop system and stay within it.

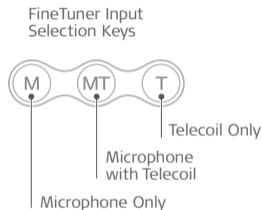


- 2 Press the **MT** or **T** button on your **FineTuner** to activate the telecoil function and select the input type.

Mini Battery Pack

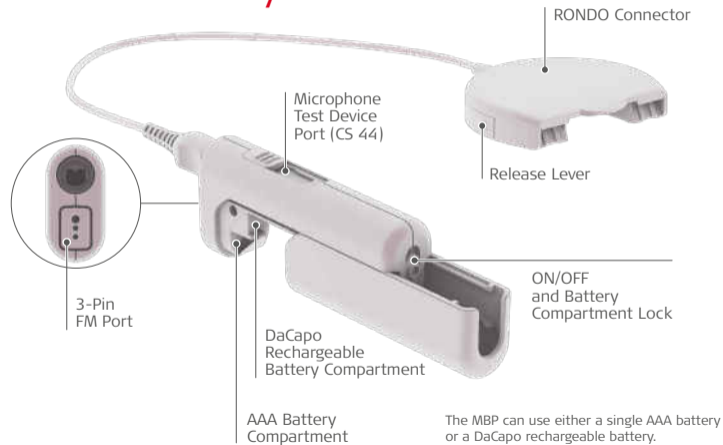

Basic Assembly

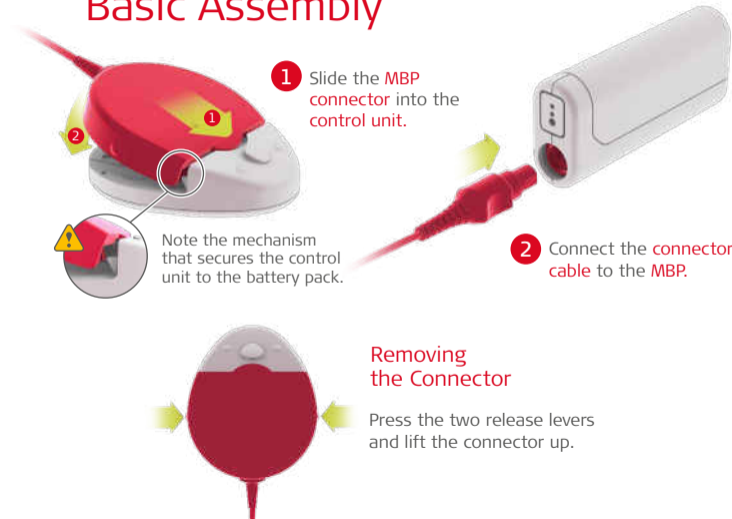

Assistive Listening Devices

Direct Audio Input



- 1 Insert the 3-pin plug of the audio adapter cable into the FM port.



- 2 Insert the 3.5 mm plug of the audio adapter cable into the headphone port of the audio device.

Audio Adapter Cables



Unilateral Mix



Unilateral Ext.




Bilateral Mix



Bilateral Ext.

FM Receiver

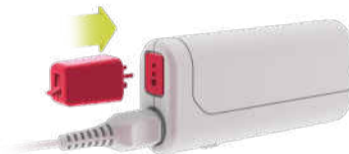

Insert the FM receiver into the FM port. RONDO will automatically detect sound signals as soon as the FM system is activated.



Refer to the user manual for your FM system for instructions on changing FM settings.

Accessories



Attachment Clip

The attachment clip should be used to secure RONDO to clothing or hair to reduce the risk of losing or damaging the processor.



Fixation Loop for Glasses

The fixation loop can be used to secure RONDO to a pair of glasses or sunglasses.



RONDO Protector

The RONDO Protector is a soft silicone cover that should be used to protect RONDO from fall damage and other minor impacts.



WaterWear

WaterWear is a waterproof cover that provides complete water protection for RONDO. Only silver-oxide, alkaline, or rechargeable batteries should be used with WaterWear.

Basic Care and Maintenance

Follow these basic and important care instructions to help improve the functioning of your RONDO and extend its life.


General Cleaning

Clean RONDO regularly by wiping it with a soft, damp cloth. Don't use cleaning solutions. Use extra care when cleaning small parts such as the battery contacts.



Battery Contacts

Inspect the battery contacts regularly; clean and dry them as necessary. To clean them, use a cotton swab and a small amount of rubbing alcohol. Gently wipe them dry. Avoid touching the battery contacts.

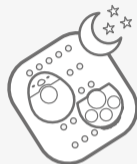

Drying

Use the drying kit every night to allow RONDO to dry out completely. Remove the battery pack cover before putting it into the drying kit with your audio processor. Disposable batteries can be left in the frame and put into the drying kit.



Don't put rechargeable batteries into the drying kit.



Moisture

Protect RONDO from exposure to water. If your audio processor gets wet, gently wipe it dry with a soft absorbent cloth.



Sunlight

Don't leave RONDO in direct sunlight, especially inside of a vehicle. Don't expose your audio processor to extreme temperatures.



Refer to your user manual for more information about care and maintenance.

Troubleshooting

In case you encounter any minor technical problems, such as an interruption in sound, carefully follow these steps to identify possible causes and solutions:

1. Remove your RONDO and change the batteries. If that doesn't solve the problem, go to 2.
2. Disassemble your RONDO and check each part for dirt or signs of damage. Gently clean any processor parts that are dirty and wipe dry any parts that are wet. (See instructions on pages 22–23.) If any parts appear damaged, contact your CI centre for assistance.
3. Reassemble RONDO. (See instructions on pages 2–3.) If your processor still isn't working, go to 4.
4. Use the Speech Processor Test Device to troubleshoot your audio processor.

Speech Processor Test Device

The Speech Processor Test Device (SPTD) is a troubleshooting tool for detecting the most common audio processor problems. To troubleshoot with the SPTD, follow these steps:



1. Switch on your RONDO.
2. Place the flat side of RONDO under the Speech Processor Test Device.
3. Speak into the RONDO microphones. The indicator light should flicker to the rhythm of your voice. If it doesn't, go to 4.
4. Adjust the volume and speak into the microphones. If the indicator light doesn't flicker, go to 5.
5. Change the batteries and speak into the microphones. If the indicator light doesn't flicker, contact your CI centre.

For complete troubleshooting instructions, visit medel.com.

MED-EL Medical Electronics
Fürstenweg 77a | 6020 Innsbruck, Austria
office@medel.com

medel.com

