

# SAMBA™ Quick User Guide

## Changing the battery



**1.** To change the battery, hold the device between two fingers. First open one side of the battery case, then open the other side.



**2.** Open the battery case until the battery is completely visible. Carefully turn the Samba upside-down, allowing the battery to drop out.



**3.** Take a new battery and remove the sticky tab from the top. Place the battery in the audio processor's battery case. To activate the Samba, slide the battery case into the audio processor with two fingers.

## Changing the cover



**1.** First, remove the battery (see above). Then place the Samba on an even surface such as a table and put one finger on top. First, lift one side of the cover then lift the other side.



**2.** Remove the cover completely from the audio processor. Place the new cover on the Samba by positioning the rear side of the cover on the audio processor first. Press the cover down: firstly on the rear side, then on the front side. Make sure that it snaps into place.



**3.** Press the sides together to ensure that the cover is securely in position. Insert the battery and close the battery case with two fingers.

## Using the hairclip



**1.** First, remove the battery (see first page) and the cover completely (see first page).



**2.** Feed the attachment thread through the small notch under the battery case. Press the attachment thread down to fixate it in the audio processor. Use a small pointed object such as a pencil for doing this.



**3.** Place the cover on the Samba and insert the battery. Close the battery case with two fingers.

## Using the Remote Control



### **1. Control Buttons – home & mute**

When you press the “home” button you reset your audio processor to the default volume and hearing program, e.g. if you wear two audio processors and one does not respond to the remote control. With the “mute” button no audio signals will be transmitted by the SAMBA.

### **2. Change programs**

Press the program change button to switch to the next hearing program. Each program change is indicated by a beep sequence (one beep for program 1, two beeps for program 2, and so forth).

### **3. Adjust Volume**

Press the volume up button or the volume down button to adjust the volume by one step. Each volume change is indicated by a beep.

### **4. General Menu**

When you press the volume up button and the volume down button simultaneously, you enter the general menu. You can navigate through the menu entries by pressing the volume up button or the volume down button.